

Casall T200 (TM616F-2KM)

Service Manual



This model is created from Adventure 2 for Casall only

Only the model stickers are changed

TABLE OF CONTENTS

CHAPTER 1: SERIAL NUMBER LOCATION


CHAPTER 2: ENGINEERING MODE

2.1 Engineering Mode

2.2 Engineering Mode Overview

CHAPTER 1: Serial Number Location

1-1 Serial Number Location

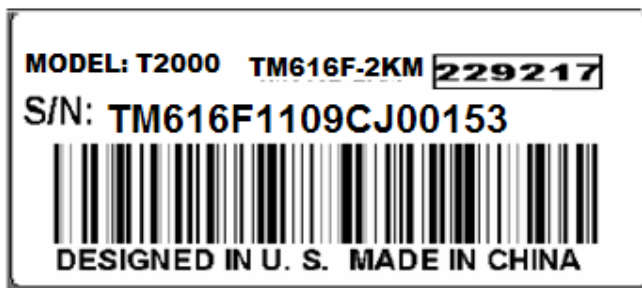

CHAPTER 2: Engineering Mode

2.1 ENGINEERING MODE

Hold both incline “▲” and speed “—” at the same time about 3 sec to get into the engineering mode.

The display will show ENGINEERING MENU.

Use incline “▼” or “▲” and speed+/- to scroll engineering mode from Eng0 to Eng 4. Press “Enter” into set up parameter



2.1 ENGINEERING MODE OVERVIEW

Mode	Function	Description
Eng 0	Display Test	Start→ LED on Stop→LED off Any Keys→display on window Hold “Stop” 3 sec→ back to “Engineering Menu”
Eng 1	Hardware Test	Motor , Incline motor test
Eng 2	Auto Calibration	To auto calibrate speed only.
Eng 3	Switch Function	Use “Start” to select unit. 1—KM, 0—Mile Use elevation or speed to change “Demo” on or off
2 nd Level Eng 8	Software version	In Eng 3, to hold “Speed +” / “Incline —” into Eng 8 Press “Enter” to P0---software version Press “Enter” to P1---select speed up rate—Normal/Quick Press “Enter” to P3---Hold “Start” 3 sec to clear all data.
Eng 4	Information	Accumulated Time and Distance Hold “Start” 5 sec to reset Remarks: Unit of Time is Hour. Unit of Distance is KM or Mile based on your set.